
BUILD THE

BACK TO THE FUTURE™ DELOREAN

ISSUE 59

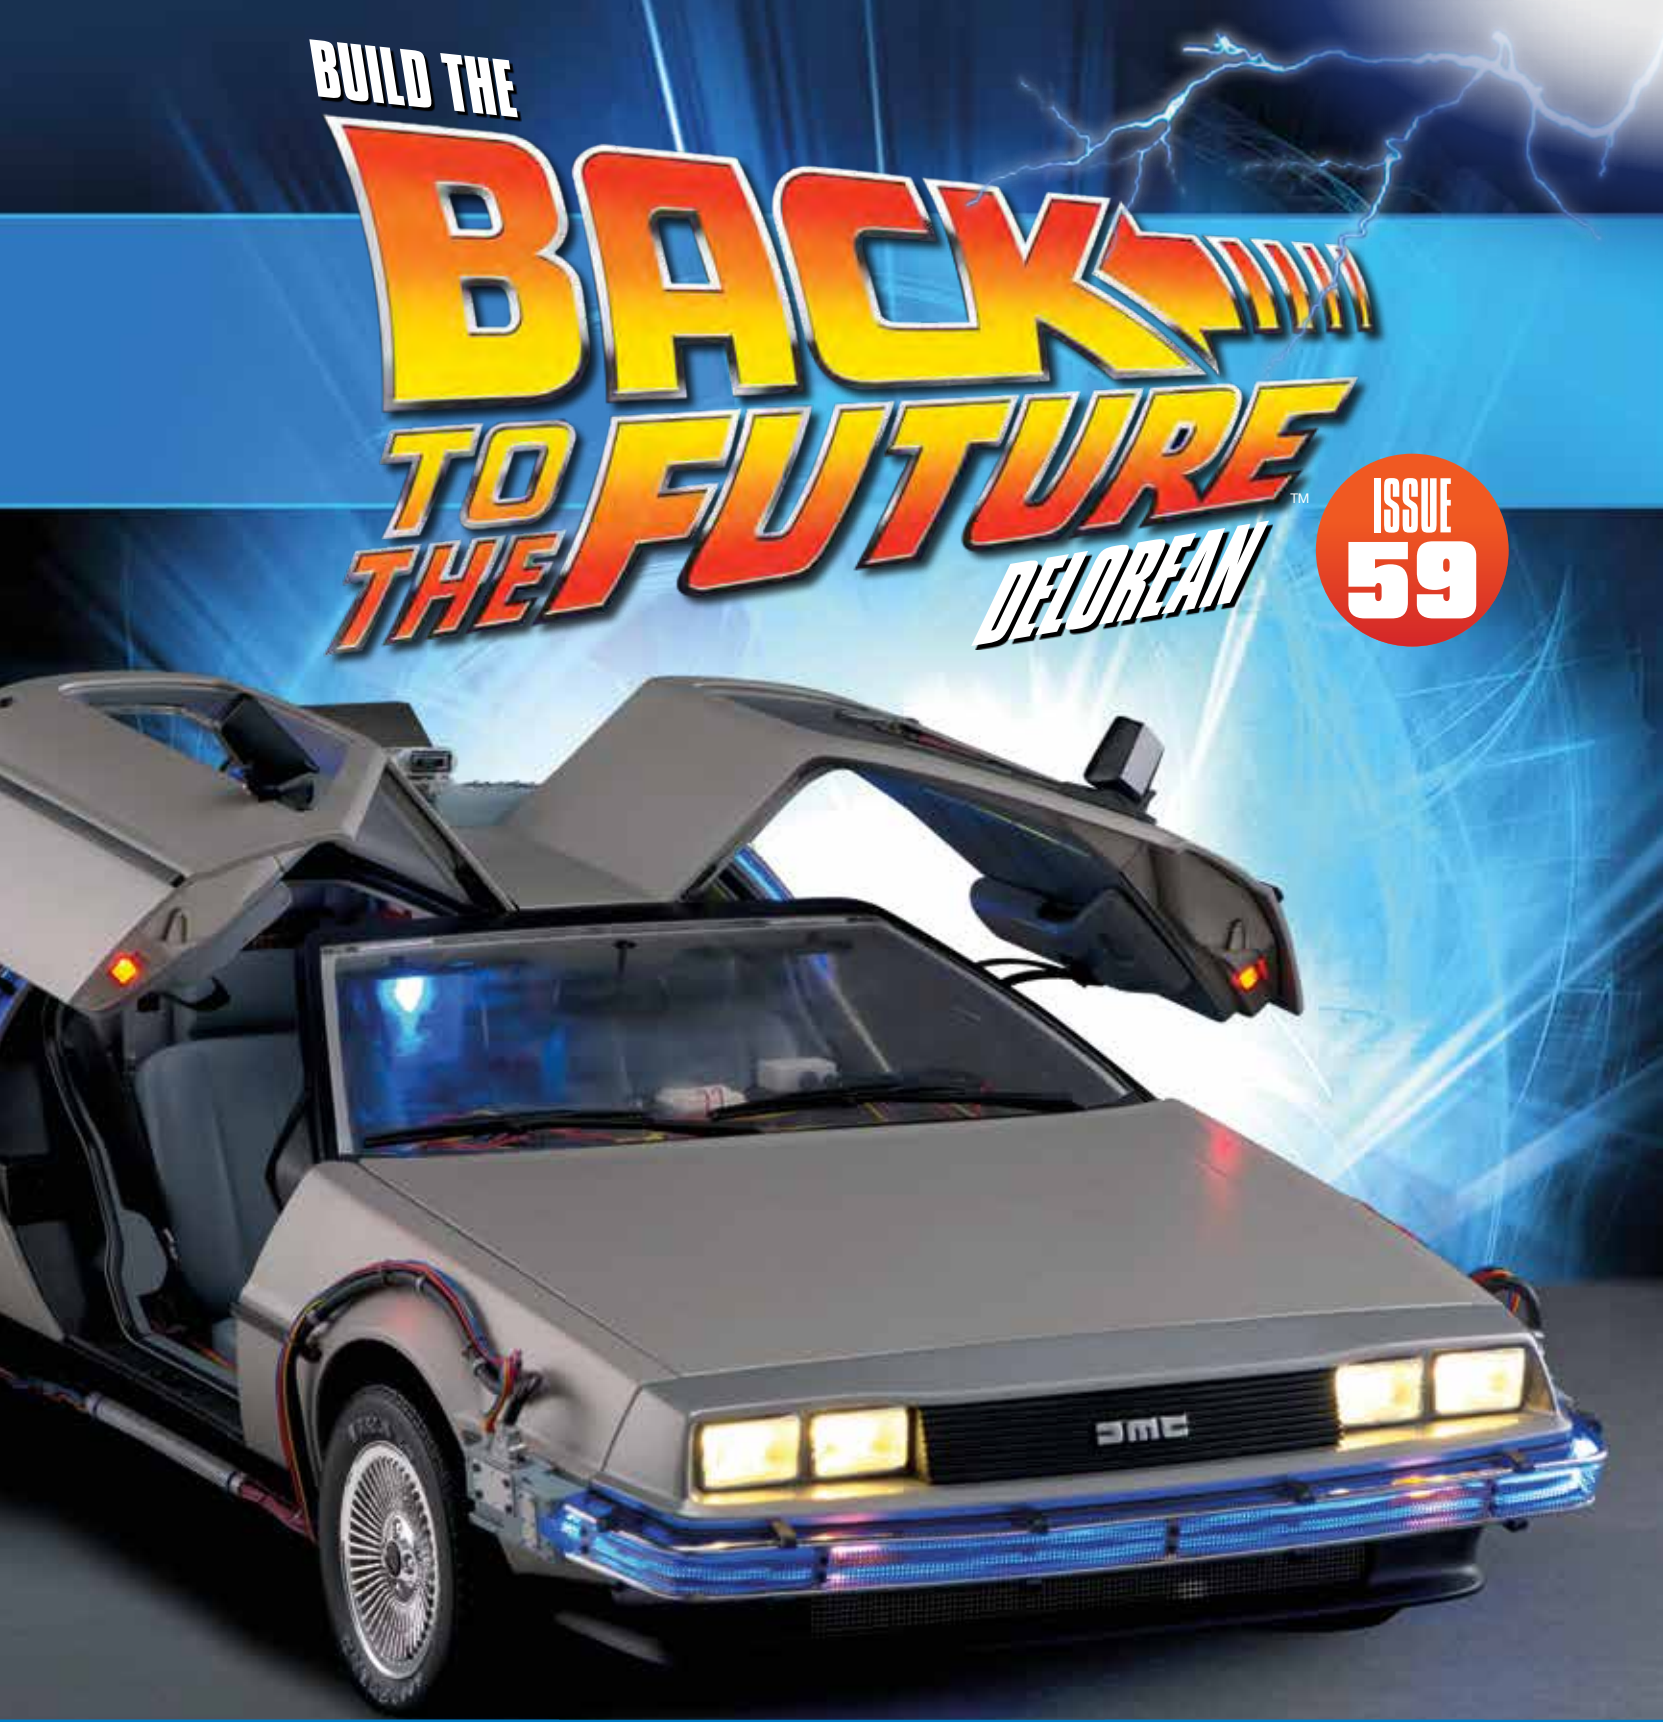







FANHOME

BUILD THE ICONIC 80s TIME MACHINE IN 1:8 SCALE

UNIVERSAL

BUILD THE

BACK TO THE FUTURE DELOREAN

ISSUE 59



CONTENTS

4 **DRIVE TIME**
This issue's extended assembly guide shows you how to fix the seats and bulkhead into the chassis of your DeLorean and connect more pipes and cables, with step-by-step illustrations.

10 **A TIME TRAVELLER'S GUIDE**
Twin Pines Mall, the scene of Doc Brown's first Temporal Experiment, was transformed by Marty's journey to the past...

© 2023 Universal City Studios LLC and Amblin Entertainment, Inc. All Rights Reserved.
© 2023 DeAgostini Publishing, S.p.A. All Rights Reserved.

Creative Director: Maggie Calmels
Managing Editor: Ben Robinson
Art Editor: James King
Writer: Kieran Grant

ISSN: 2057-357X
Printed in Italy/Czech Republic

The price of this issue includes the magazine and the attached pieces for model assembly.

UNITED KINGDOM
Published by DeAgostini UK Ltd c/o Royds Withy King, 69 Carter Lane, London EC4V 5EQ.

UNITED STATES
Published by DeAgostini Publishing USA, Inc. 299 Park Avenue, New York,New York 10171.

TO OUR READERS
The publisher reserves the right to modify any components as required during the course of the collection. Not suitable for children under the age of 14 (12 in the USA).
This product is not a toy and is not designed or intended for use in play. The collection is complete in 158 issues. Items may vary from those shown.

WARNING
Any reproduction, even partial, of the contents of the magazine is prohibited without permission from the Publisher.
The model and the magazine that accompanies it are strictly for private use, and within the family, in accordance with Article L122 - 5 10 of the Code of Intellectual Property. Any reproduction other than that provided for in Article L122 - 5 20 of the Intellectual Property Code is prohibited. The magazine and/or elements of the collection may not be distributed, loaned, resold, rented or exploited for commercial purposes. All rights reserved.





CUSTOMER SERVICES

UK
Email customer.service@deagostini.co.uk

USA
Email support@usa.deagostini.com



More information
at **fanhome.com**

YOUR CAR PARTS

With this issue you receive these details for the DeLorean, plus fixing screws.


59A PIPE



59B FAN



59C CABLE

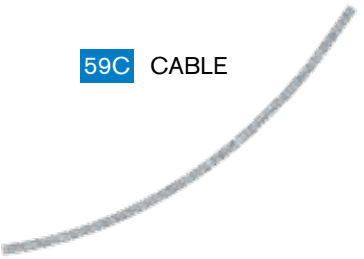

59E BRACKETS




59G TAB



59D CABLE



59F TWIN CABLE

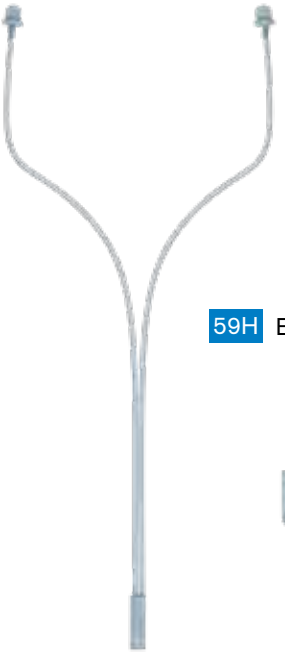

59H BRACKET



AP SCREW X 3



FP SCREW X 5



BM SCREW X 2



DM SCREW X 4




DRIVE TIME

Add details to the upper part of the bulkhead for your DeLorean.


In this issue you will continue the assembly of the interior by following these step-by-step instructions.




BULKHEAD (UPPER)

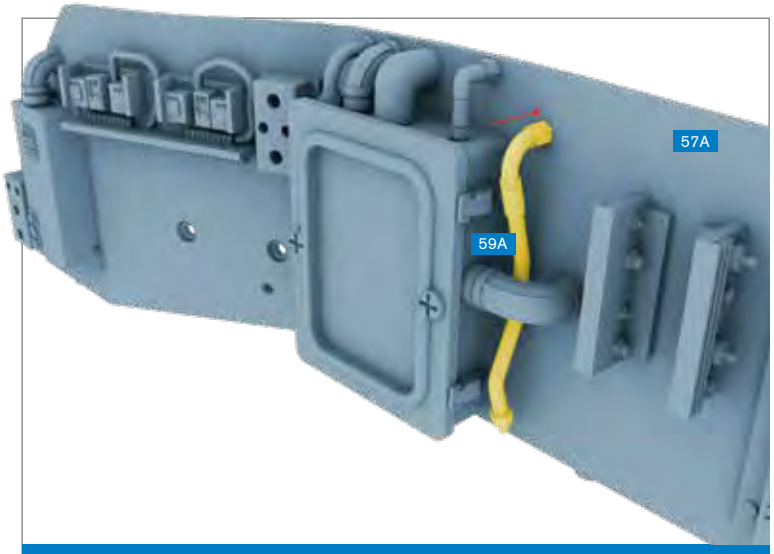


STEP 1 ›› Pass part 59A under the large pipe on the right of the flux capacitor box, and push it into place in the upper bulkhead (57A) as shown.

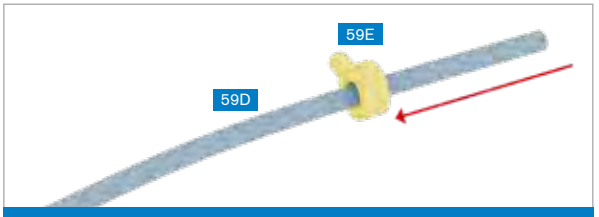


STEP 2 ›› Push one of the brackets 59E onto cable 59D, pushing it along about 3cm.

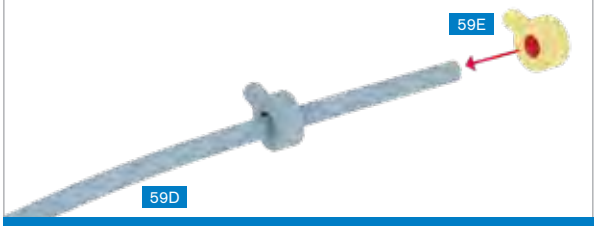


STEP 3 ›› Push the other bracket 59E onto the end of cable 59D.

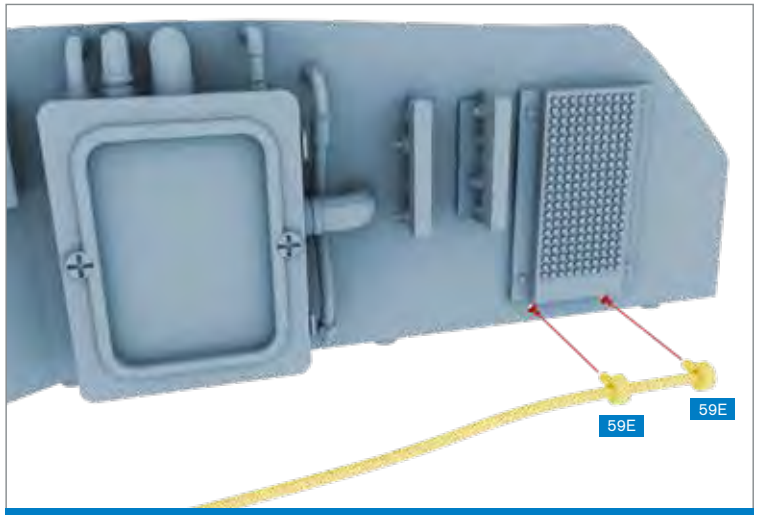


STEP 4 ›› Push the two posts on brackets 59E into the bulkhead in the holes shown, to hold cable 59D in place under the light board.

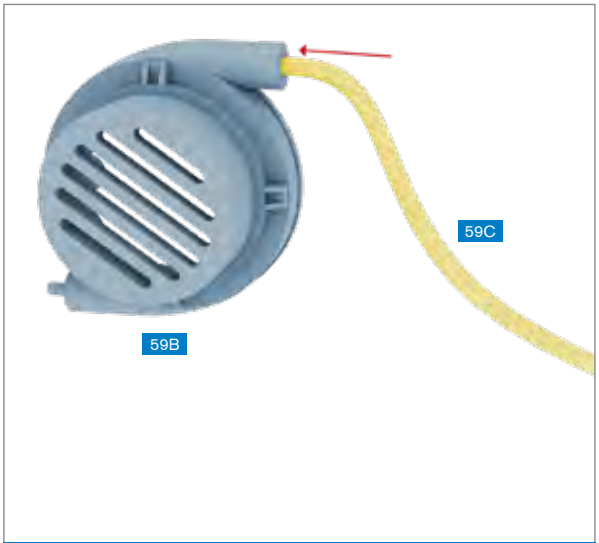


STEP 5 ›› Push cable 59C into part 59B as shown.

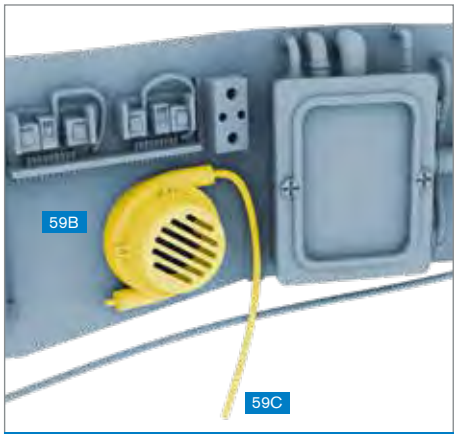


STEP 6 ›› Push part 59B into place on the bulkhead by aligning the posts and holes.

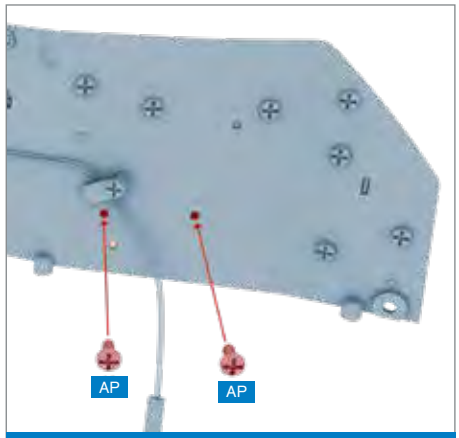


STEP 7 ›› Fix part 59B in place with two AP screws in the back of the bulkhead.

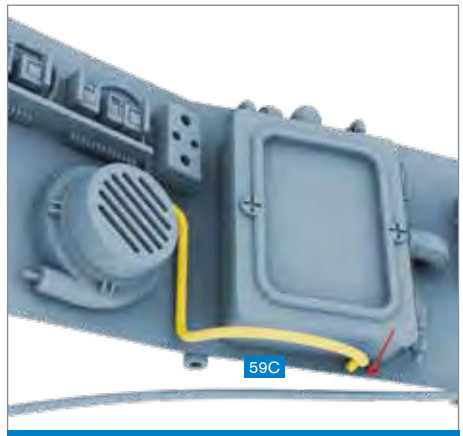


STEP 8 ›› Push cable 59C into the bulkhead in the position shown.

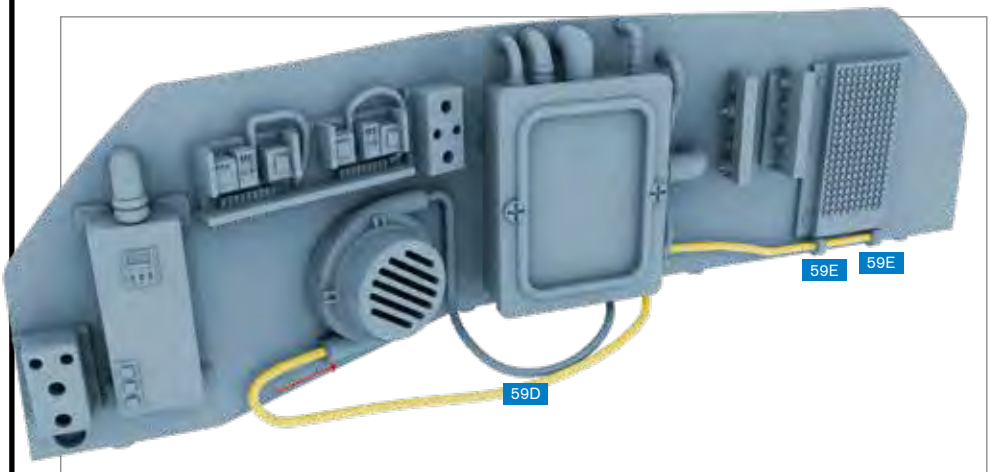

STEP 9 ›› Push the end of cable 59D into part 59B as shown.

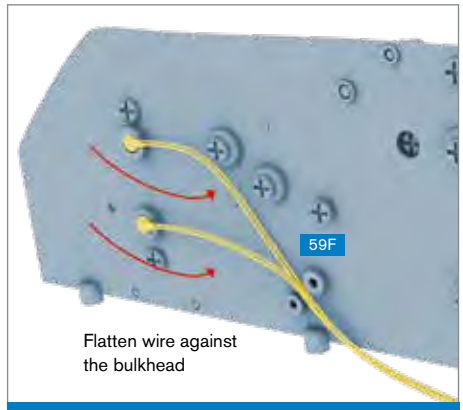

STEP 10 ›› Push the two ends of wire 59F into the back of the bulkhead and bend the wire through the posts as shown.

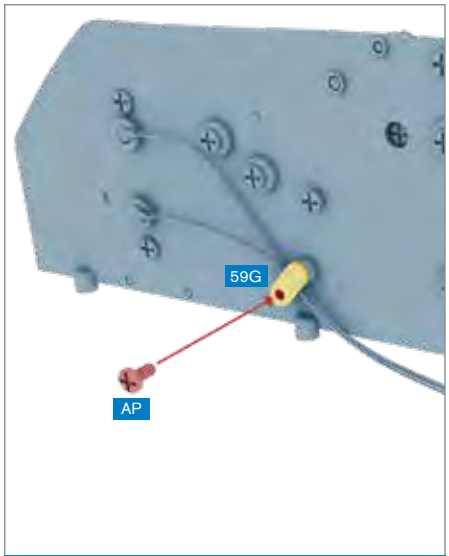


STEP 11 ›› Hold wire 59F in place with tab 59G and an AP screw as shown.



STEP 12 ›› Push cable 49H into the bulkhead as shown.




STEP 13 ›› Bring the upper portion of the bulkhead into position as shown, aligning the lugs on 57A with the holes in 54A.

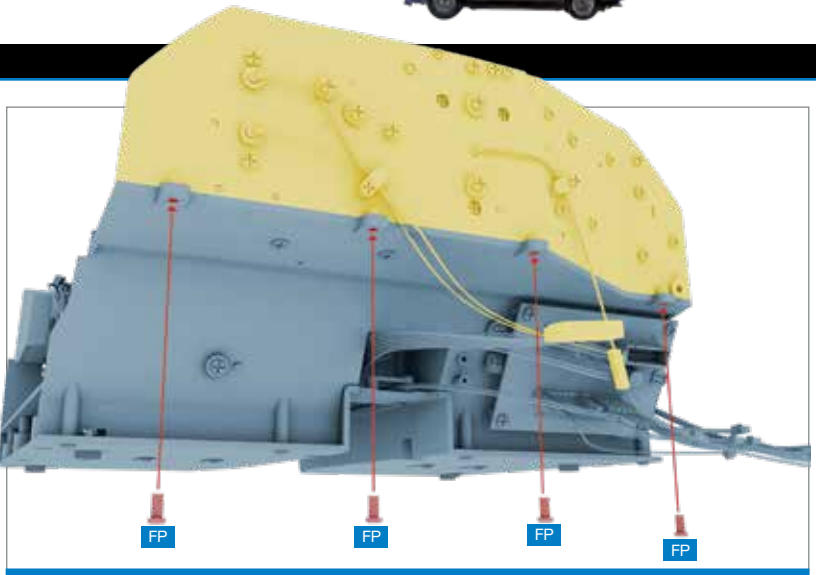

STEP 14 ›› Fix the upper and lower portions of the bulkhead together with four FP screws in the holes shown.



STEP 15 ›› Push pipe 53B into the hole in the bulkhead next to the passenger seat.

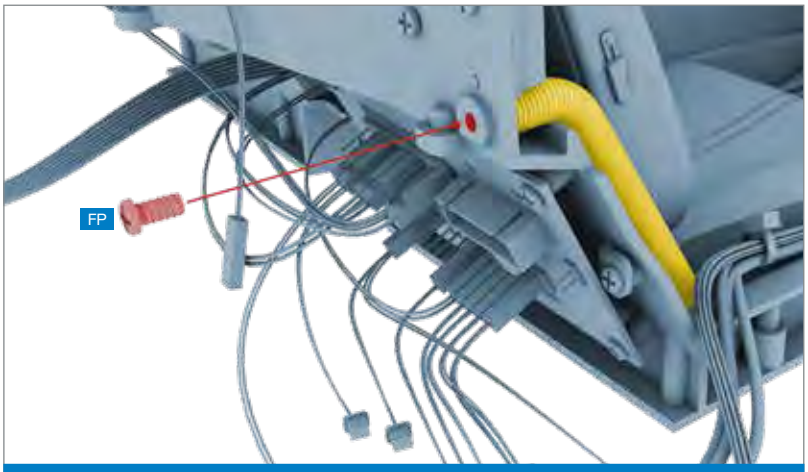


STEP 16 ›› Fix pipe 53B in place from the other side of the bulkhead with an FP screw in the hole shown.



STEP 17 ›› Push the plug marked 16 into the corresponding '16' socket on the circuit board.



STEP 18 ›› Push the plug marked 15 into the corresponding '15' socket on the circuit board.

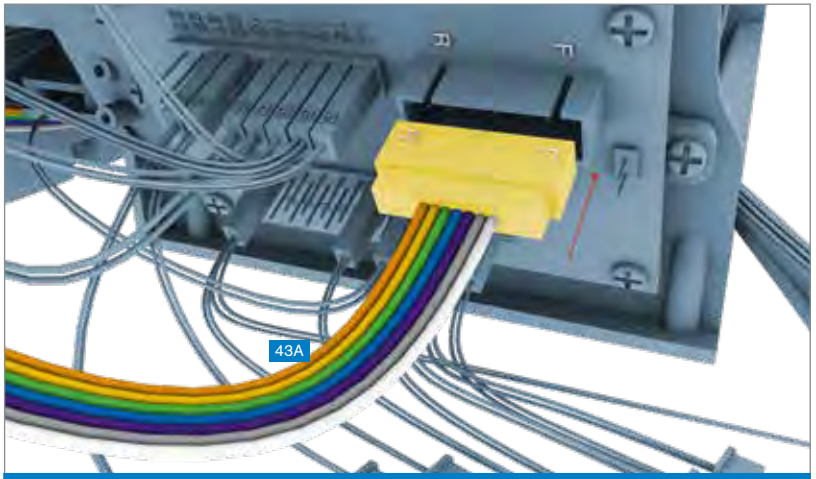

STEP 19 ›› Push the connector at the end of the multicoloured lead 43A into the large socket on the circuit board, aligning the letters R and F.



STEP 20 ›› Push pipe 59A into place next to the flux capacitor box as shown.



STEP 21 ›› Push pipe 49D into socket 57I next to the flux capacitor.




STEP 22 ›› Push the two cables 49C into socket 57I.




STEP 23 ›› Push cable 49E into the remaining hole in socket 57I.



STEP 24 ›› Push cable 53E into socket 57J next to the passenger seat.

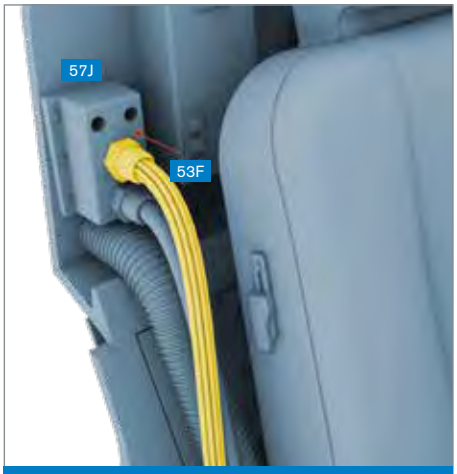

STEP 25 ›› Push cable 53F into the middle hole of socket 57J.

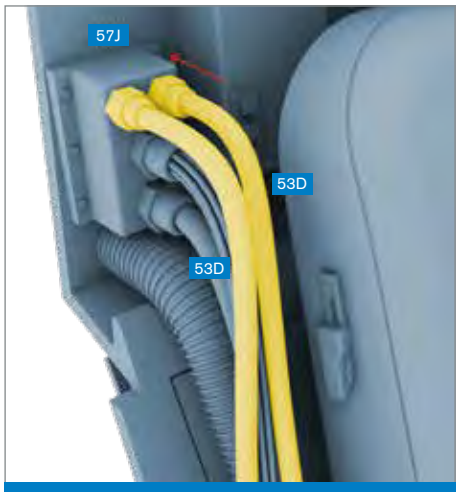

STEP 26 ›› Push the two cables 53D into the socket 57J as shown.



STEP 27 ›› Push the plug marked 19 into the corresponding '19' socket on the circuit board.



STEP 28 ›› Push the plug marked 22 into the corresponding '22' socket on the circuit board.



STEP 29 ›› Push the plug numbered 23 into the '23' socket on the circuit board.




STEP 30 ›› Push the plug numbered 6 into the '06' socket on the circuit board.








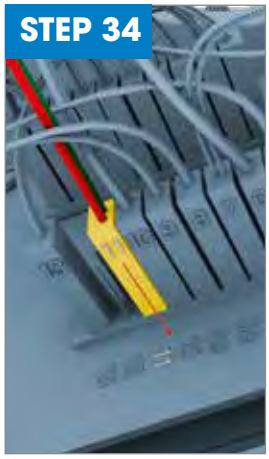




STEPS 31-35 ›› Continue this process with plugs 8, 9, 10, 11 and 12, fitting each cable into the corresponding numbered socket on the circuit board, until the two rows of sockets on the circuit board are full.

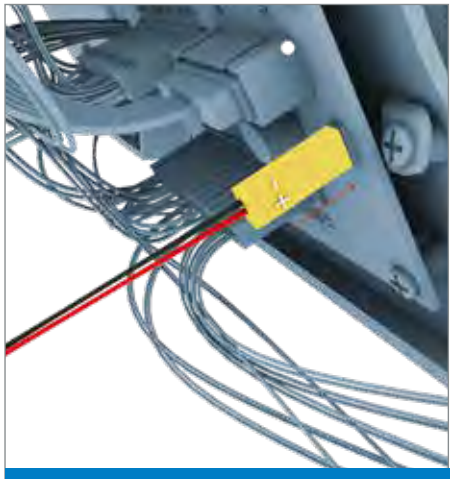

STEP 36 ›› The last plug is marked + - and fits into the circuit board as shown.



STEP 37 ›› Position the dashboard, floor, seat and bulkhead assembly in the chassis, ensuring that the cables and steering column fit as shown in Steps 38 and 39.

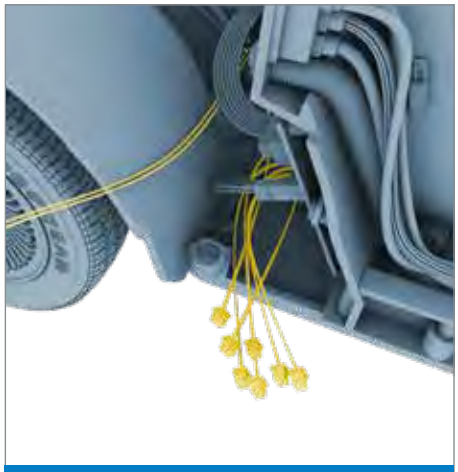

STEP 38 ›› Gather together all the unused cables and keep them clear.



STEP 39 ›› Fit the end of the steering column (47B) into the hole in the steering rack (7A) as shown.




STEP 40 ›› Fix the floor in place with two DM screws in the holes shown.



STEP 41 ›› Fix two more DM screws in the holes shown.



STEP 42 ›› Keep the steering column in place with bracket 59H, slipping it under the wires as shown. Fix with two BM screws.

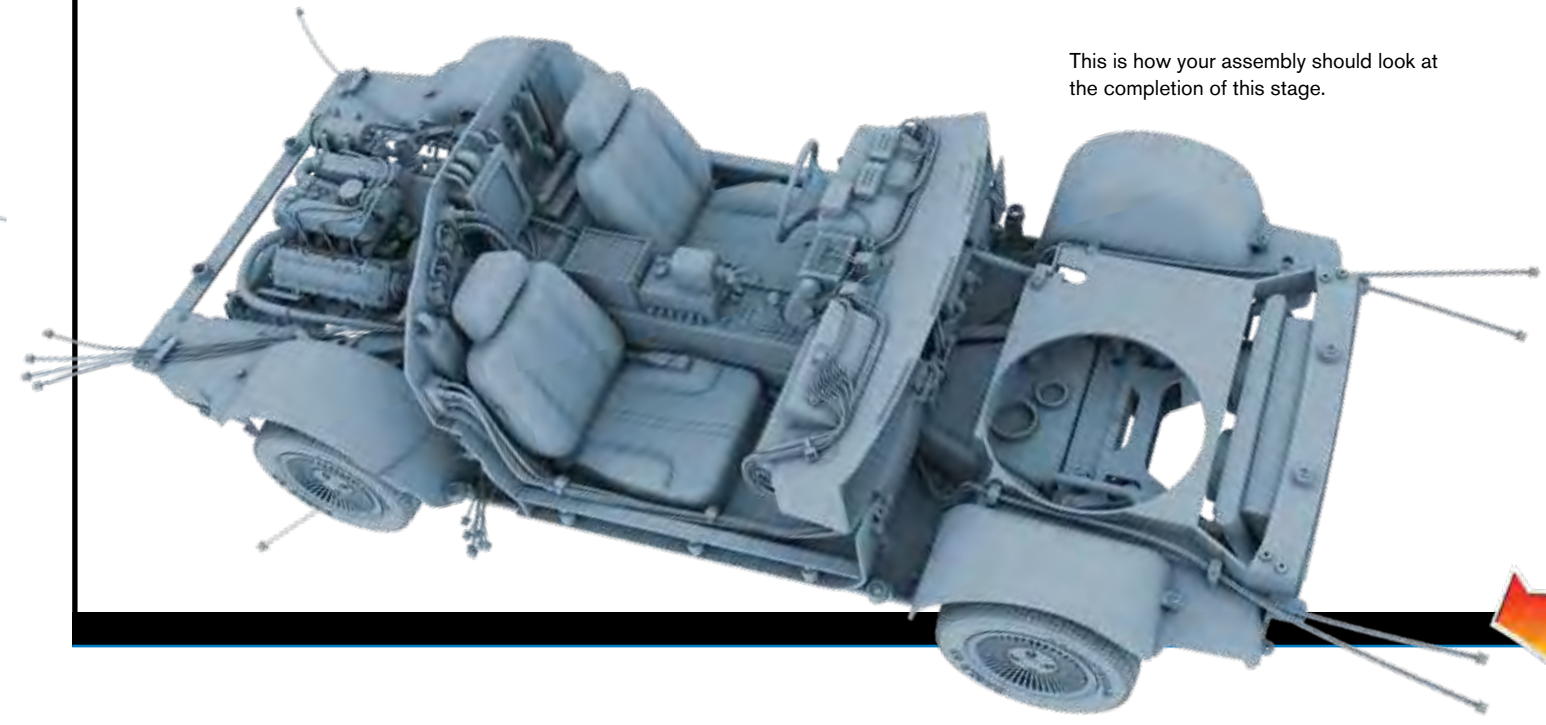

This is how your assembly should look at the completion of this stage.



Above: Signs of the times! The Twin Pines Mall sign (left) has been transformed (above) when Marty returns to 1985 after his adventures in 1955.

TWIN PINES MALL

TWO BECOME ONE

Marty's time travelling has an unexpected effect on the local shopping mall...

Not long before he unexpectedly gets to travel in time, Marty McFly learns that Doc Brown's gadgets can create havoc when a giant amplifier blows him off his feet. But Marty doesn't have much time to worry about that, as he receives a call from the Doc in a state of great excitement. "Can you meet me at Twin Pines Mall tonight at 1:15? I've made a major breakthrough, I'll need your assistance!"

Twin Pines Mall is a smart complex not far from the town square, with shops including JC Penney's and Patrini shoes, but the deserted parking lot is slightly sinister at one in the morning, wet from the rain. As Doc Brown demonstrates his marvellous DeLorean, he reminisces about how things have changed thereabouts. "I remember when this was all farmland as far as the eye could see," he says. "Old Man Peabody owned all of this. He had this crazy idea about breeding pine trees."

Later, having travelled back to 1955, Marty encounters Old Man Peabody and his family, and his escape from the Peabodys' barn has an unforeseen consequence. As Marty speeds away, he knocks over one of the two young pine trees that Peabody has been nurturing.

And when, some time later, Marty returns to his starting-point, it is not Twin Pines Mall any longer. Because of Marty hitting that tree, it is now the Lone Pine Mall... ■

> **"Old Man Peabody... had this crazy idea about breeding pine trees."**
>
> DOC BROWN

QUICK FACTS!

MAKING THE NEWS

● The Twin Pines Mall scenes were filmed at the Puente Hills Mall, City of Industry, California, in the mall's south parking lot. The ground was sprayed with water to reflect the lights in the Delorean to make the scene look more exciting.

Fans organised a screening of *Back to the Future* at the Mall in 2010, with a DeLorean appearing in the parking lot at the same time that it appeared on screen.

NEXT ISSUE...

UPPER FRAME

Begin working on the upper frame for your DeLorean model.

In the next issue you'll receive the upper frame for your model, plus step-by-step instructions telling you how to fix it to the chassis.

YOUR CAR PARTS...

THE UPPER FRAME





GRIFFITH PARK

Hollywood's historic Griffith Park provided the location for a climactic scene in *Back to the Future Part II*.

PICTURE CREDITS: All photos © Universal except where stated.

BUILD THE

BACK TO THE FUTURE™ DELOREAN

FANHOME

UNIVERSAL

F230FSC059